


## Touch Screen (without navigation system)

By touching the screen with your finger, you can control the audio system and air conditioning system, and adjust the screen display etc. For details, refer to the "Owner's Manual".

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

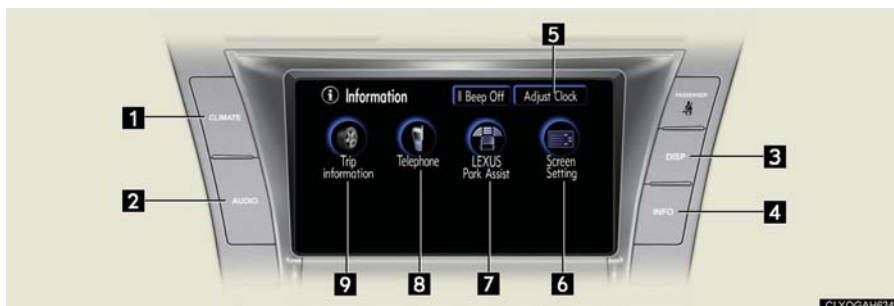

Press the button to display the screen. The "Information" screen shown in the above illustration is displayed when the "INFO" button is pressed.

- 1 "CLIMATE": Air conditioning operation screen
- 2 "AUDIO": Audio control screen
- 3 "DISP": Display screen
- 4 "INFO": Information screen
- 5 "Adjust Clock": Adjust clock screen
- 6 "Screen Setting": Screen setting screen
- 7 "LEXUS Park Assist": Intuitive parking assist setting screen
- 8 "Telephone": Telephone screen
- 9 "Trip information": Trip information screen



## Audio System (without navigation system)

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

### n Basic operation



- 1 Displays the audio control screen
- 2 SURROUND (Surround sound)  
ASL (Automatic Sound Levelizer)
- 3 Audio sources  
AM•SAT: AM radio  
FM: FM radio  
DISC•AUX: DVD player/Auxiliary audio device
- 4 Power/Volume
- 5 Sound quality and balance modes

### n Radio



- 1 Displays the audio control screen
- 2 Station presets
- 3 Scan  
All radio stations: press  
Preset radio stations: press and hold
- 4 Radio tuner
- 5 Station selection
- 6 Seek

### n Entering station presets

- 1 Select the desired station by using the tuner, or the seek or the scan functions.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.



## n DVD player

### n Playing a DVD



- 1 Displays the audio control screen
- 2 Disc selection
- 3 Disc load
- 4 Track, file and chapter selection/fast forward/reverse
- 5 Eject

### n Playing an audio CD



- 1 Displays the audio control screen
- 2 Displays track list
- 3 Disc selection
- 4 Scan
  - All tracks in current disc: press
  - First track of each disc: press and hold
- 5 Random playback
  - Current disc: press
  - All discs: press and hold
- 6 Disc load
- 7 Track selection/fast forward/reverse
- 8 Eject
- 9 Repeat
  - Current track: press
  - Current disc: press and hold

### n Loading a disc

- 1 Press the "LOAD" button.
- 2 When the indicator changes from flashing amber to green, insert a disc after the player door opens.



## n Loading multiple discs

- 1 Press and hold the "LOAD" button until you hear a beep.
- 2 When the indicator changes from flashing amber to green, insert a disc after the player door opens.
- 3 After inserting a disc, wait until the indicator changes from flashing amber to green, then insert the next disc after the player door has opened.

Repeat 2 and 3 until you have inserted all discs.

To cancel the operation, press the "LOAD" or "DISC•AUX" button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

## n Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.




- 1 Power on/audio sources: press  
Power off: press and hold
- 2 Volume
- 3 Radio mode: radio tuner  
DVD mode: track/chapter/disc selection  
CD mode: disc/track/file (MP3/WMA) selection

## n Rear seat audio controls (if equipped)


Some front audio features can be controlled from the rear seats.

### ► 5-seat models

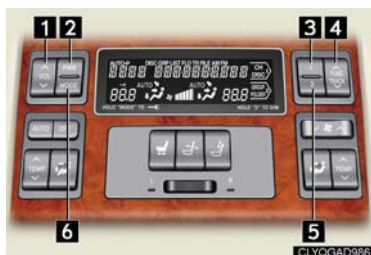

- 1 Volume
- 2 Power
- 3 Disc selection
- 4 Radio: station selection  
Audio CD or DVD audio: track selection  
Video CD or DVD video: chapter selection  
MP3 CD or WMA CD: file selection
- 5 Folder selection
- 6 Audio sources

### ► 4-seat models

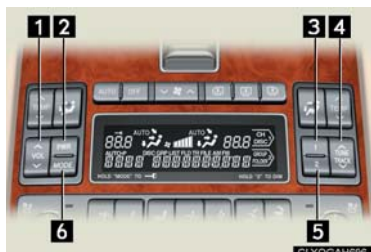

## Front Air Conditioning System (without rear air conditioning system)



- |  |                                       |
|--|---------------------------------------|
| 1 Air conditioning operation screen display button | 7 Micro dust and pollen filter button |
| 2 Air flow display                                 | 8 Windshield defog/defrost            |
| 3 Fan speed display                                | 9 Off button                          |
| 4 Passenger's side temperature control             | 10 Driver's side temperature display  |
| 5 Outside air/recirculated air mode button         | 11 Automatic mode button              |
| 6 Passenger's side temperature display             | 12 Dual mode button                   |
|  | 13 Driver's side temperature control  |
|  | 14 Air conditioning switch            |

### n Using the automatic mode

- 1 Press the "AUTO" button.
- 2 Adjust the temperature using the "TEMP" buttons.

### n Adjusting the temperature in dual mode

In dual mode, driver and passenger's side temperature settings can be adjusted separately.

Press the "PASSENGER TEMP" button to adjust the temperature for the passenger's side. To cancel the dual mode, press the "DUAL" button.



## Front Air Conditioning System (with rear air conditioning system)



- |   |  |
|---|--|
| 1 Air conditioning switch                                 | 8 Outside air/recirculated air mode button |
| 2 Air flow display  | 9 Passenger's side temperature display     |
| 3 Air conditioning operation screen display button        | 10 Micro dust and pollen filter button     |
| 4 Rear air conditioning operation screen display switch   | 11 Windshield defog/defrost                |
| 5 Fan speed display                                       | 12 Off button                              |
| 6 Air purifier and rear air conditioning operation switch | 13 Driver's side temperature display       |
| 7 Passenger's side temperature control                    | 14 Automatic mode button                   |
|   | 15 Individual mode button                  |
|   | 16 Driver's side temperature control       |

### n Using the automatic mode

- 1 Press the "AUTO" button.
- 2 Adjust the temperature using the "TEMP" buttons.

### n Adjusting the temperature in individual mode

In individual mode, the temperature for the driver's, front passenger's and rear seats can be adjusted separately.


Press the "PASSENGER TEMP" button to adjust the temperature for the passenger's side. To adjust the temperature for the rear seats, see page 49. To cancel the individual mode, press the "4-ZONE" button.

## Rear Air Conditioning System (If Equipped)

### ► 5-seat models



### ► 4-seat models

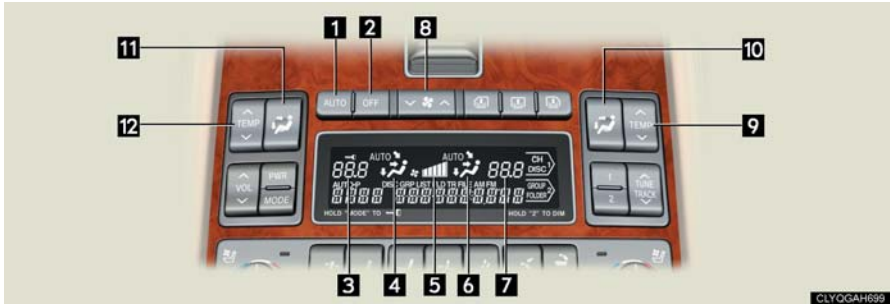

1 Automatic mode button

2 Off button

3 Left side temperature display

4 Left side airflow display

5 Air volume display

6 Right side airflow display

7 Right side temperature display

8 Air volume controls


9 Right side temperature control

10 Changes the right side air outlet used

11 Changes the left side air outlet used

12 Left side temperature control

### n Front controller (touch screen)

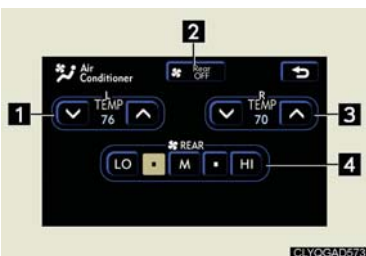

1 Left side temperature control switch and display

2 Off

3 Right side temperature control switch and display


4 Fan speed display





## Climate Control Seats/Seat Heaters

### n Front climate control seats

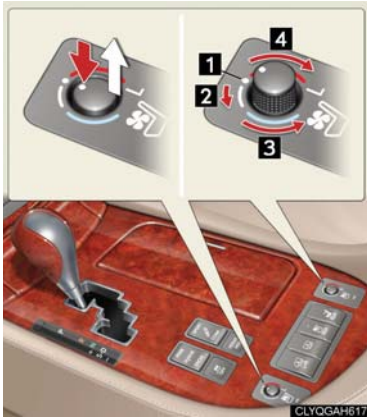

Press the knob to pop out, and turn the knob to adjust the seat temperature.

- 1 Off
- 2 Ventilation
- 3 Cool air
- 4 Warm air

### n Rear climate control seats (if equipped)

#### ► 5-seat models



Press the knob to turn the system on, and turn the knob to adjust the seat temperature.

- 1 Ventilation
- 2 Cool air
- 3 Warm air

#### ► 4-seat models



The rear climate control seats can also be turned on and off from the front seat by pressing the button.







## n Rear seat heaters (if equipped)



Press the knob to turn the system on, and turn the knob to adjust the seat temperature.

The rear seat heaters can also be turned on and off from the front seat by pressing the button.





## Heated Steering Wheel



To heat the leather portion of the steering wheel, press the button. Press again to cancel.

## Console Box




To open, slide and lift the armrest with the knob pushed in.

There is a power outlet located in the front console box.



## Glove Box

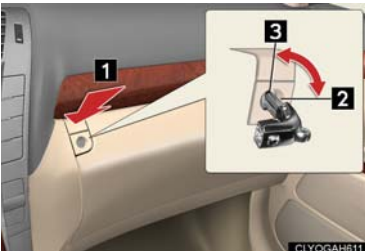

- 1 Opens: press the button.
- 2 Locks
- 3 Unlocks

The glove box can be locked and unlocked using the mechanical key.



## Auxiliary Boxes



### ► Overhead

To open, press in the button.



### ► Rear seat (5-seat models)

To open, press the button and lift the lid.



### ► Rear seat (4-seat models)

To open, press in the lid.



## Cup Holders



### ► Front

To open, press down the lid on the side farthest to the driver.



### ► Rear (5-seat models)

To open, press in and release.



### ► Rear (4-seat models)

To open, press in and release.

Hybrid System

Entering and  
Exiting

Before Driving

When Driving

Rain and  
Night Driving

Driving Comfort


Opening and  
Closing

What to do if ...

Customizing  
Your Lexus




## Rear Sunshade/Rear Door Sunshades

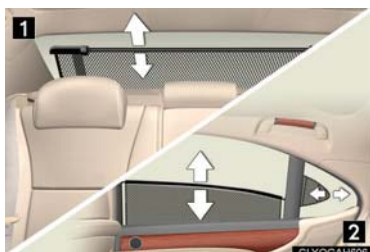


- 1 Rear sunshade
- 2 Rear door sunshades (if equipped)

### n Raising/Extending from the front seat

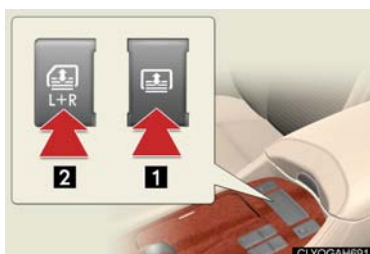

- 1 Raises the rear sunshade  
Press the button again to lower it.
- 2 Extends the rear door sunshades  
Press the button again to retract them.


### n Raising/Extending from the rear seat

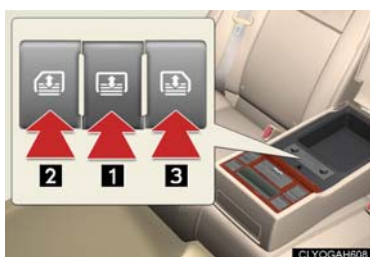

#### ► 5-seat models

- 1 Raises the rear sunshade
- 2 Extends the rear door sunshade (left side)
- 3 Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

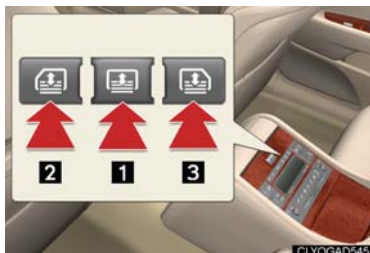

#### ► 4-seat models

- 1 Raises the rear sunshade
- 2 Extends the rear door sunshade (left side)
- 3 Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

The rear sunshade automatically lowers to ensure visibility when reversing.



## Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.



The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

### Programming HomeLink®



- 1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.
- 2 Press and hold down the desired HomeLink® button.
- 3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4 Press the training button on the motor-head unit in your garage.
- 5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.

If the door does not open, press and release the same button once again.



## n Programming other devices

---

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

## n Operating HomeLink®

---



Press the appropriate HomeLink® button.  
The indicator light should come on.





## Lexus Link System (If Equipped)

The Lexus Link System is a communication service that uses the GPS (Global Positioning System) data and cellular service to provide you with safety, security and convenience. Button operation and voice commands are used to operate the system. To operate the system, follow the voice guidance instructions.

### n Buttons



- 1** Voice keypad button  
Sends number tones to an automated phone system for example to access voice-mail, during a phone call
- 2** Volume control  
Adjusts your Lexus Link System audio volume
- 3** Phone button
  - Makes or answers a phone call using the hands-free personal calling service
  - Ends a call
- 4** "SERVICES" button
  - Contacts the Lexus Link Call Center for information, directions or other services
  - Records a conversation for later playback
- 5** Emergency button  
Makes a priority call to the Lexus Link Call Center



## n Services

The Lexus Link System offers the following services. For details about the services and subscription, refer to the Owner's Manual or call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free).

- Airbag deployment notification  
If an airbag deploys, an emergency call is automatically placed to the Lexus Link Call Center with your vehicle's location. You do not need to press any buttons.
- Emergency assistance  
When you press the Emergency button, a priority call is placed to the Lexus Link Call Center with your vehicle's location. At the Call Center, the Lexus Link Advisor can determine your vehicle's location, communicate with you, and, if appropriate, contact the nearest emergency service provider.
- Stolen vehicle location assistance  
If your vehicle is stolen, call the Lexus Link Call Center and then select the option for Lexus Link.
- Remote horn /lights and remote door lock/unlock  
The remote operations are performed by contacting the Lexus Link Call Center from the outside of the vehicle. When necessary, call the Lexus Link Call Center and then select the option for Lexus Link.
- Advisor record  
You can record a conversation with the Lexus Link Advisor.
- Personal calling from OEM telematic services  
The Lexus Link System provides access to personal calling, a hands-free phone service provided by OEM telematic services.
- Other services  
Press the "SERVICES" button in the vehicle or call the Lexus Link Call Center and then select the option for Lexus Link. The services provided will depend on the service plan level.

This system is only operational in GPS (Global Positioning System) and cellular coverage areas.